

# AccuRIP and All Black Ink

# 101

A Screen-Printer's Plan for Success!

## Installing and Turning On All Black Ink Cartridges *(also sold under the brands BlackMax or JetBlack)*

### DESKTOP USERS

Epson Stylus Photo 1400  
Epson Stylus Photo R1800  
Epson Stylus Photo R1900

### WIDE FORMAT USERS

Epson 4800  
Epson 4880  
Epson 7880  
Epson 9880

Carefully unpackage your inks. Follow any “on-cartridge” instructions for removal of tabs (if applicable).

Each cartridge is labeled with its proper slot. Insert the cartridges in your model matching cartridges to their proper slots *(you can not use cartridges designed for a particular slot in any other slot as this can damage the cartridge chip and will also not function)*. We suggest inserting cartridges from slot number one on upward but it is not absolutely necessary to follow this order. Wide Format users that need insertion instructions should refer to their Epson Model instructions on ink cartridge installation.

**Desktop Users:** make sure the cartridges all comfortably fit and make a slight clicking sound indicating they have each made the proper contact. **Wide Format Users:** note that an on-screen message of “Non-Genuine” is simply an Epson disclaimer noting they are not Epson cartridges. Answer the disclaimer on your Epson inkjet display screen by clicking the down arrow until an option to ACCEPT appears. Then click the LEFT arrow to accept. The printer will now charge the inks and display the READY message.

In rare instances a cartridge does not set or fails due to static electricity or power surge, etc.. The chip simply needs reprogramming which is easily accomplished using the sanctioned chip resetter sold your distributor or on our web site. Note: not all resetters are created equal and actually do not “reprogram” the All Black Ink cartridges.

You will now need to turn on the All Black Ink option in AccuRIP Software (or verify the setting is still on from previous use). Under AccuRIP's FILE MENU>Setup simply CLICK the Multi-black option. You will see that your entire list of cartridge slots are checked and ON. Note: you have the ability to check on or off any or all slots to customize your use. Make sure you manage this section properly to avoid uneven draining of cartridges. Uneven ink draining is through the activities of a user and can not occur due to AccuRIP.

Don't Be Without a spare set of ALL BLACK INK or a sanctioned CHIP RESETTER.